


KM-20

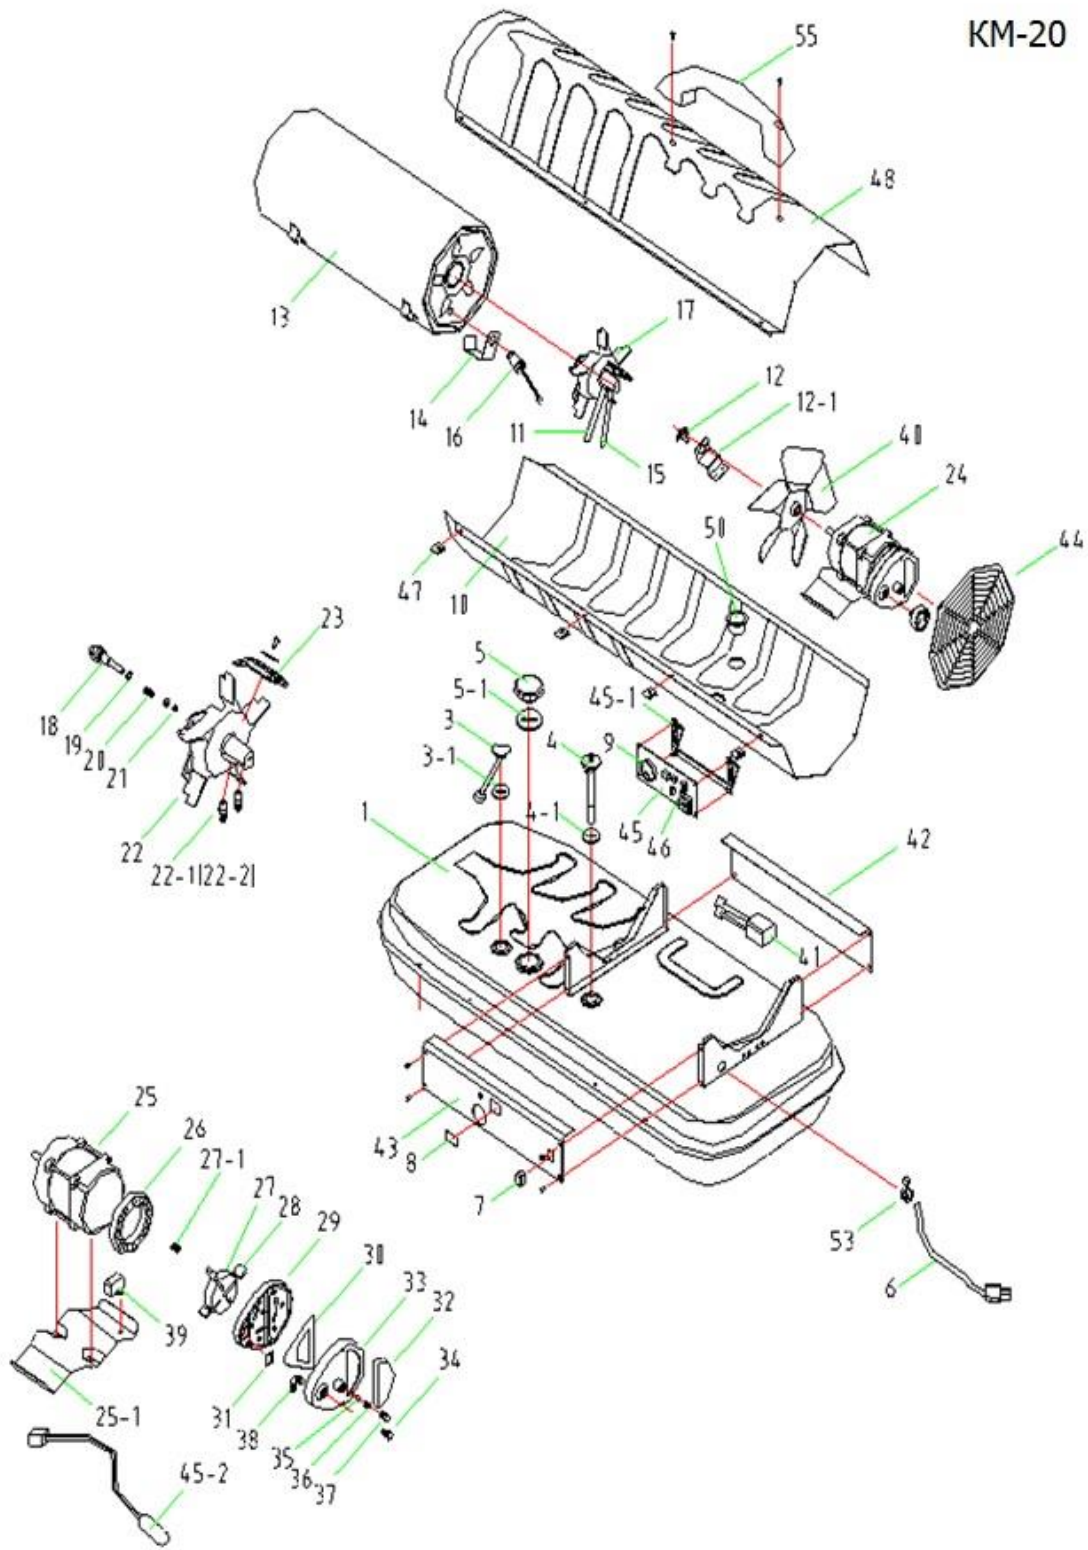

1	DW8-002-001	Fuel Tank Ass'y	34	DW8-000-034	Plug/Pump Adj.Kit
2			35	DW8-000-035	Ball
3	DW8-002-003	Fuel Gauge Ass'y	36	DW8-000-036	Spring
3-1	DW8-002-003-1	Fuel Gauge Packing	37	DW8-000-037	Adjust Screw
4	DW8-000-004	Fuel Filter Ass'y	38	DW8-000-038	Elbow Nipple
4-1	DW8-000-004-1	Fuel Filter Packing	39	DW8-002-039	Capacitor
5	DW8-000-005	Fuel Cap		DW12-002-039	Capacitor
5-1	DW8-000-005-1	Fuel Cap Packing	40	DW8-002-040	Fan Ass'y
6	DW8-002-006	Power Cord	41	DW8-000-041	Ignitor
7	DW8-000-007	Power Switch	42	DW8-000-042	Right Side Cover
8	DW8-000-008	Window Display	43	DW8-002-043	Left Side Cover
9	DW8-000-009	Thermostat Control Knob	44	DW8-002-044	Fan Guard(Steel)
10	DW8-002-010	Lower shell		DW12-002-044	Fan Guard(Plastic)
11	DW8-000-011	Air Line	45	DW8-000-045	Main P.C.B Ass'y
12	DW8-002-012	Thermostat Lilmit Control	45-1	DW8-002-045-1	Main P.C.B Bracket
12-1	DW8-002-012-1	Thermostat Bracket	45-2		
13	DW8-002-013	Combustion Chamer	46	DW8-000-046	Fuse
14	DW8-000-014	Photocell Bracket	47	DW8-000-047	Clip Nut
15	DW8-002-015	Fuel Line	48	DW8-002-048	Upper shell
16	DW8-000-016	Photocell	49		
17	DW8-002-017	Berner Head Ass'y	50	DW8-000-050	Bushing Grommet(S)
18	DW8-002-018	Nozzle	50-1	DW8-000-050-1	Bushing Grommet(L)
19	DW8-000-019	Nozzle Seal Washer	51		
20	DW8-000-020	Nozzle Seal Spring	52		
21	DW8-000-021	Nozzle Sleeve	53	DW8-002-053	Cord Bushing
22	DW8-002-022	Berner Head	54		
22-1	DW8-002-022-1	Nipple(S)	55	DW8-000-055	Handle
22-2	DW8-002-022-2	Nipple(L)	56		
23	DW8-000-023	Spak plug	57		
24	DW8-002-024	Motor and Pump Ass'y	58		
25	DW8-002-025	Motor (Round)	59		
	DW12-002-025	Motor (Square)	59-1		
25-1	DW8-002-025-1	Motor Base (Round)	59-2		
	DW12-002-025-1	Motor Base (Square)	60		
26	DW8-000-026	Pump Body	61		
27	DW8-000-027	Rotor	62		

27-1	DW8-000-027-1	Insert	63		
28	DW8-000-028	Blade	64		
29	DW8-000-029	End Pump Cover	65		
30	DW8-000-030	Filter Kit	66		
31	DW8-000-031	Lint Filter	67		
32	DW8-000-032	Output Filter	68		
H	DW8-000-033	End Filter Cover	69		